


General recommendations:

- During the installation observe the compulsory security standards - wear protective gloves and work clothes with long sleeves.
- During transport and storage, protect against mechanical damage and UV radiation.

SELF - SUPPORTED < H = 30 CM


STEP > 1

Poliform fitting on the ground with anchor bars.

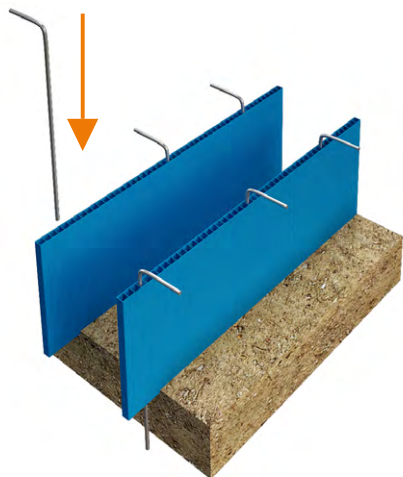

STEP > 2

D clip fitting.

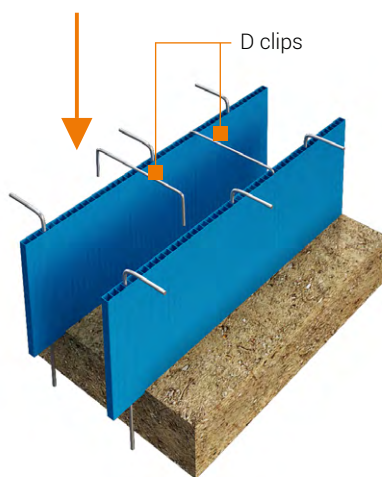


STEP > 3

Concreting.




STEP > 1

Poliform installation on the ground with anchor bars and reinforcement installation.

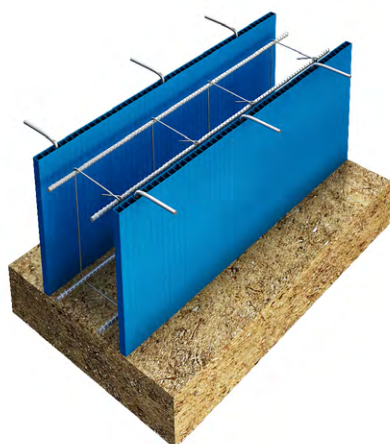

STEP > 2

D clip installation. Covering of formwork by ground or application of support.

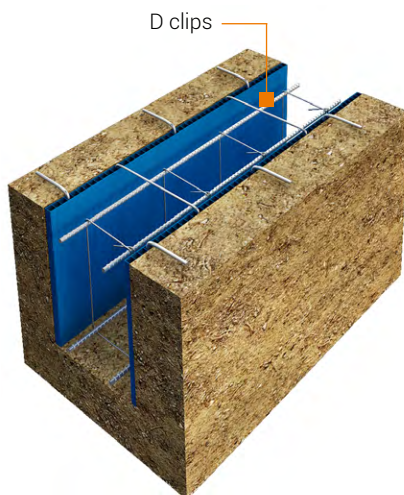

STEP > 3

Concreting.

