


General recommendations:

- During the installation observe the compulsory security standards - wear protective gloves and work clothes with long sleeves.
- During transport and storage, protect against mechanical damage.
- Above 90 cm stays made with rebars are needed.
- Up to 90 cm Forflex 5000 is self-supported.

SELF - SUPPORTED < H = 30 - 90 CM


STEP 1

Installation of Forflex 5000 to reinforcing mesh.

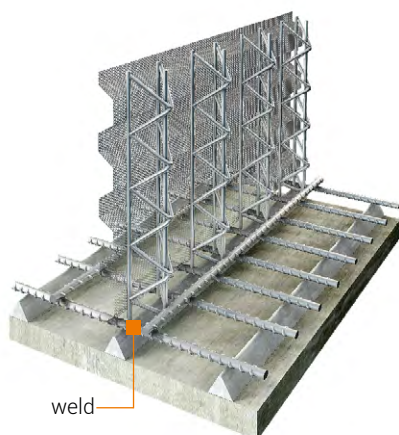


STEP 2

Addition of upper reinforcement and wooden beam.

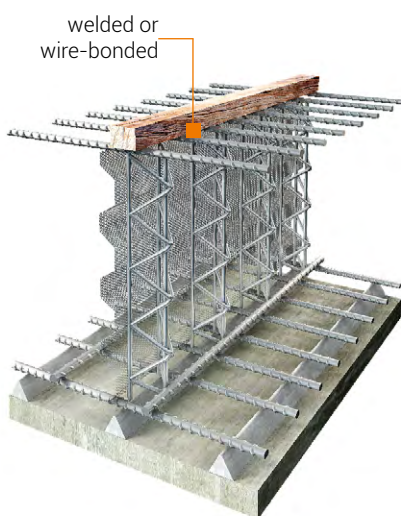

STEP 3


Concreting - to do with pressure on the trusses.

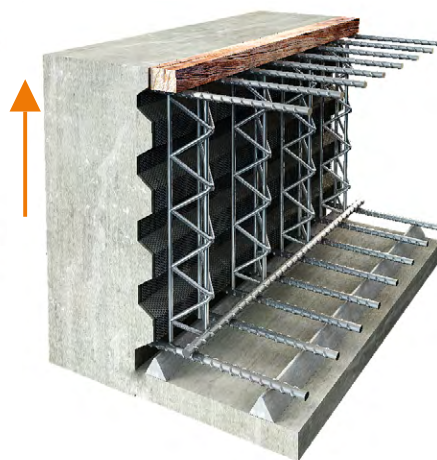

STAYS < H > 90 CM


STEP 1

Installation of Forflex 5000 with upper reinforcement and horizontal stiffness.

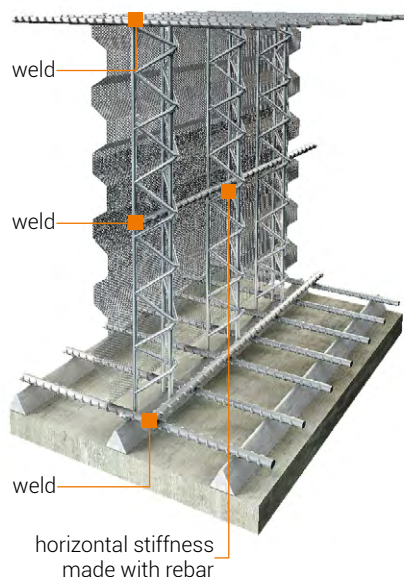

STEP 2

Installation of stays or supports. Adding a wooden beam.

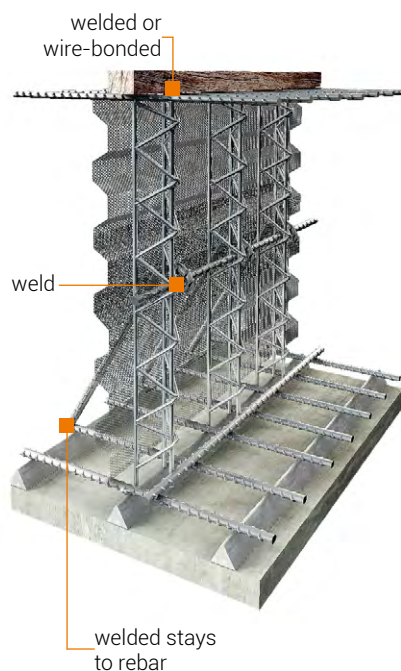

STEP 3

Concreting - to do with pressure on the trusses.

