

General recommendations:

- During the installation observe the compulsory security standards - wear protective gloves and work clothes with long sleeves.
- During transport and storage, protect against mechanical damage.
- PVC Tapes must be welded before installation of Forband.

FORBAND DH INSTALLATION


STEP 1

Unroll PVC external tape on the ground.




STEP 2

Setting of Forband DH element on previously unrolled PVC tape.

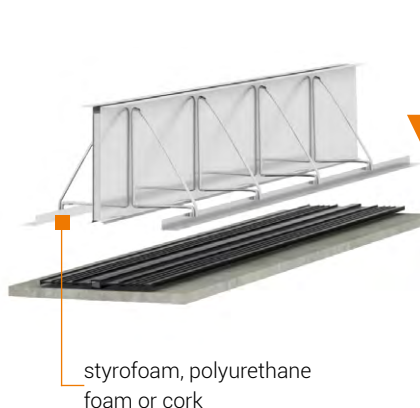

STEP 3


Installation of element to the ground using nails.

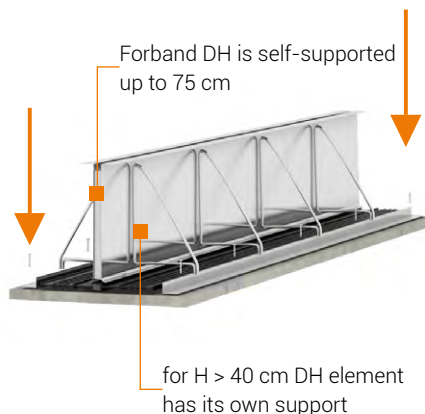

FORBAND DHI INSTALLATION


STEP 1

Setting of Forband DHI on concrete bedding. Installation with nails.

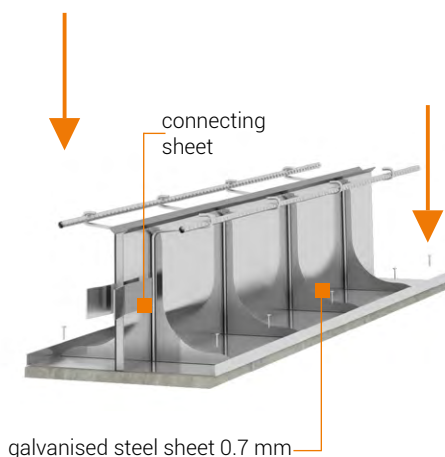

STEP 2

Unroll PVC tape and set it on upper part of DHI structure.

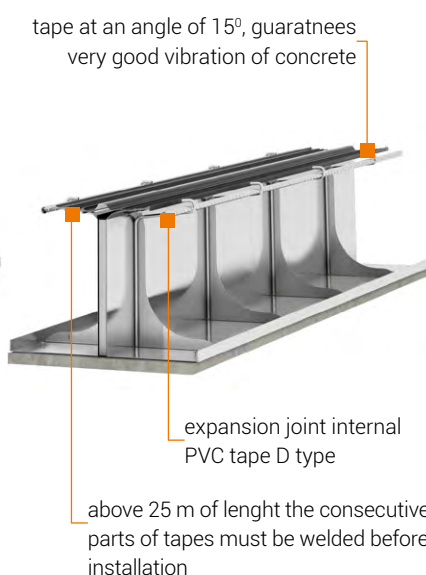

STEP 3

Setting of upper Forband DHI element on the bottom part. Connect both elements with wire tie.

