


General recommendations:

- During the installation observe the compulsory security standards - wear protective gloves and work clothes with long sleeves.
- During transport and storage, protect against damage.


STEP 1

Installation of Keymax metal feet using nails.

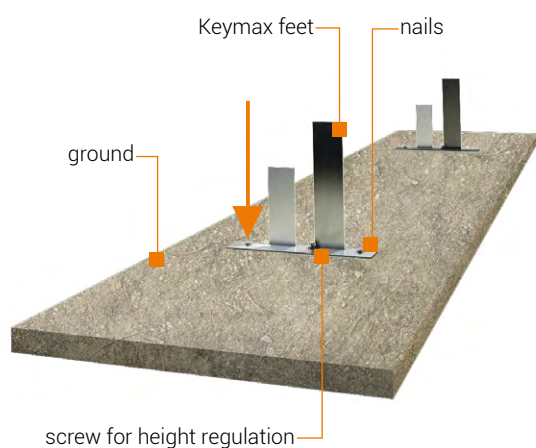


STEP 2

Setting of Keymax between flat stocks of feet.

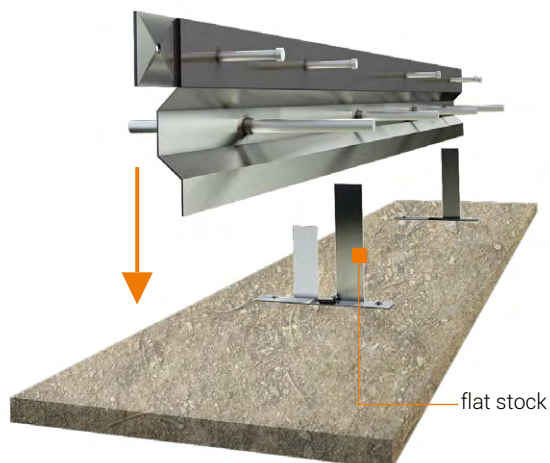

STEP 3

Height setting.

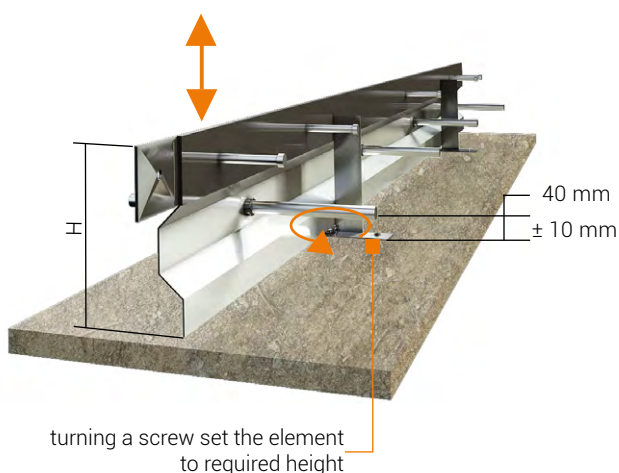

STEP 4

Concreting of section 1 and 2.

