


General recommendations:

- During the installation observe the compulsory security standards - wear protective gloves and work clothes with long sleeves.
- Minimum of anchorage in the wall - 50 mm, for anchorage = $\frac{1}{3}$ of Fordeck height, use of installation hooks is not needed.


STEP 1

Installation of Fordeck 1000 to formwork.

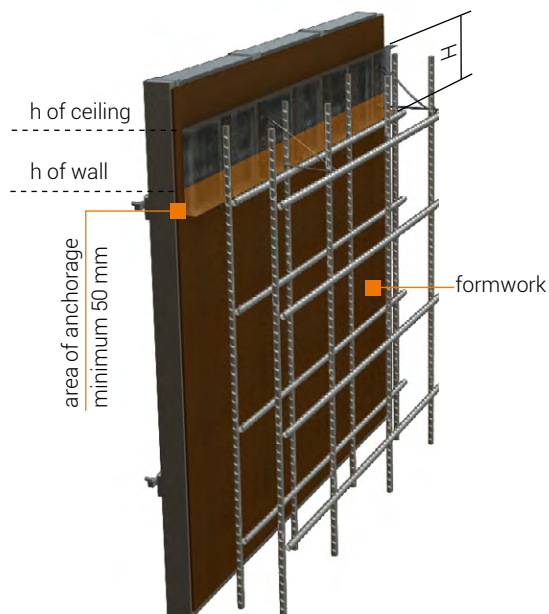

STEP 2

Concreting of walls.

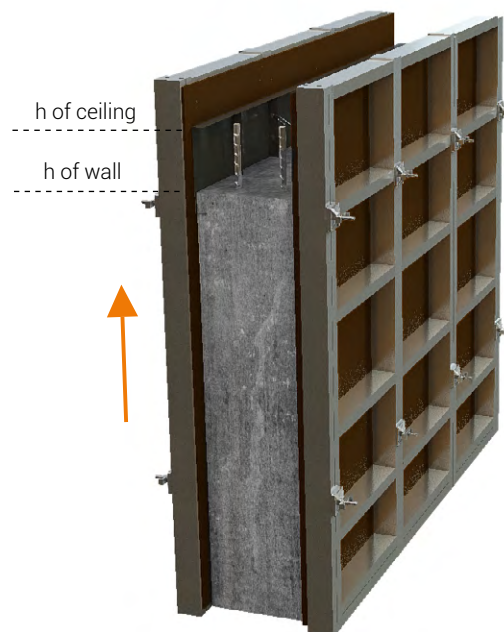

STEP 3

Removal of formworks from walls.



STEP 4

Shoring and concreting of ceiling.

