


General recommendations:

- During the installation observe the compulsory security standards - wear protective gloves and work clothes with long sleeves.
- Protect product against moisture, mechanical damage and adverse chemical factors.


STEP 1

Placing Bituflex BS/BS+ element on the upper reinforcement of the RC slab.

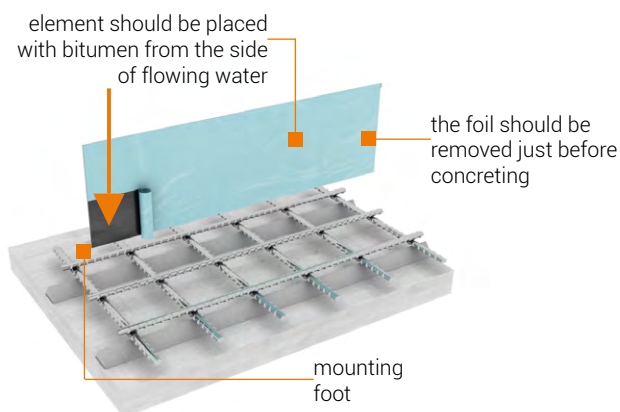


STEP 2

Connecting consecutive sections with overlap using KA 18/3 clips. Making the corner or junctions during the fitting by cutting mounting foot and bending the element. Concreting.

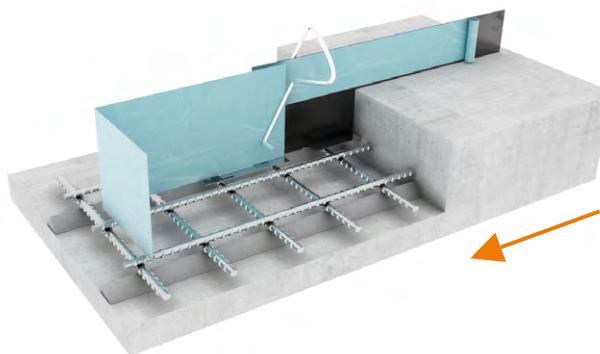


INSTALLATION OF BITUFLEX BS/BS+

Installation of Bituflex BS/BS+ with bendable metal sheets.

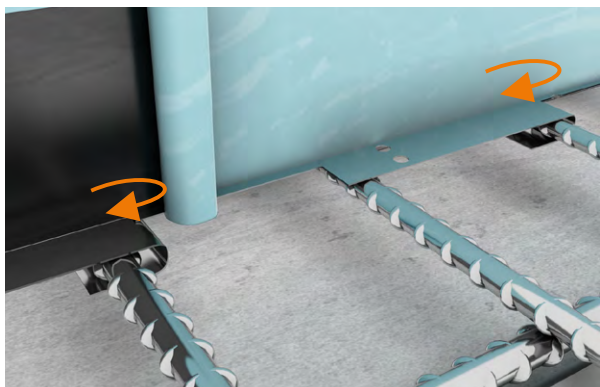


INSTALLATION OF BITUFLEX BR/BR+

Bituflex BR/BR+ should be stabilized with MBA 18/3 clip and additionally fixed to reinforcement mesh using tie wire.

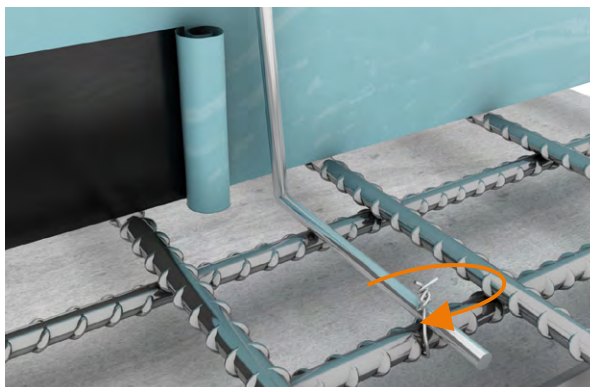

CONNECTING BY USE OF KS SCREW

Connecting Bituflex rolls with bitumen and oil resistant PVC tapes using KS screws.

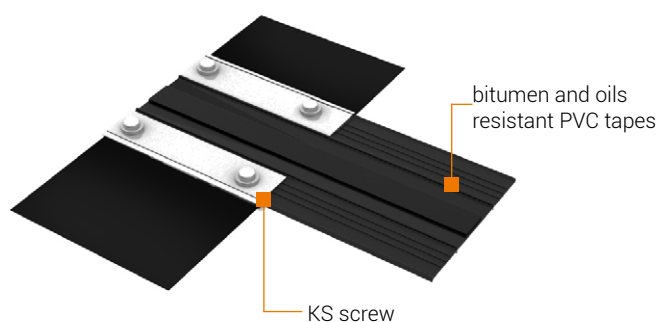

CONNECTING BY USE OF KA CLIPS

Connecting Bituflex and Forbit 1000 BV sheets with clips.

