## **KOMBI**



General recommendations:


- During the installation observe the compulsory security standards wear protective gloves and work clothes with long sleeves.
- Protect against moisture, mechanical damage and adverse chemical factors.



Placing bentonite putty.




Putting steel sheets with bentonite.

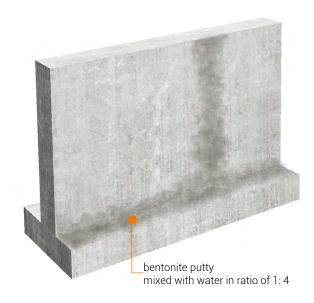



## STEP 3

Installation of sheets using nails.

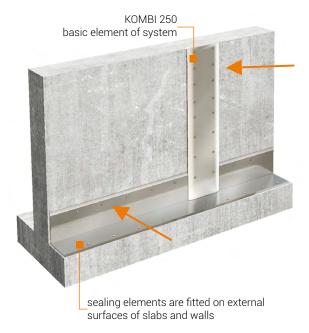

## STEP 4

Installation of vertical sheets using nails.



Copyrights in the catalog including all its concepts, individual cards, photographs and graphics belong to PARTEC SYSTEM Sp. z.o. o. with its registered office in Poland, at 55-002 Kamieniec Wrocławski, Gajków, Swobodna 6, NIP 8961572931, REGON: 369182452. Reproduction, copyring or distribution in whole or in part, without the written permission of PARTEC SYSTEM Sp. z.o. o., is prohibited. Legal basis - Polish law on copyright and related rights. (Journal of Laws No. 24/1994, item 83, as amended)