


General recommendations:

- During the installation observe the compulsory security standards - wear protective gloves and work clothes with long sleeves.
- The product should be stored in rooms protected from moisture and precipitation.


STEP 1

Placing adjacent bands of Voltex with overlap min. 10 cm. Move the overlaps of band ends by at least 30 cm.

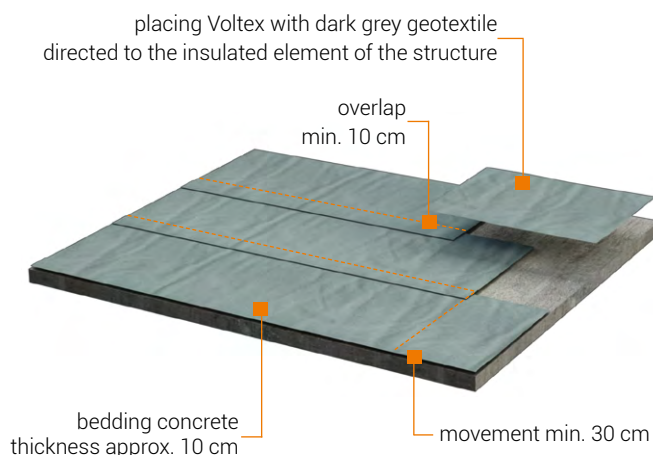


STEP 2

Protection of mat against displacement - using nails with washers or sewing up edges.

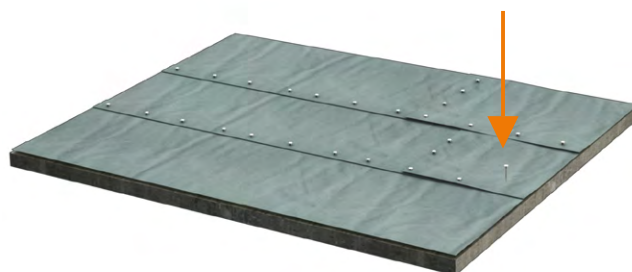

STEP 3

Place Voltex mat at least 30 cm beyond the edge of construction joint.

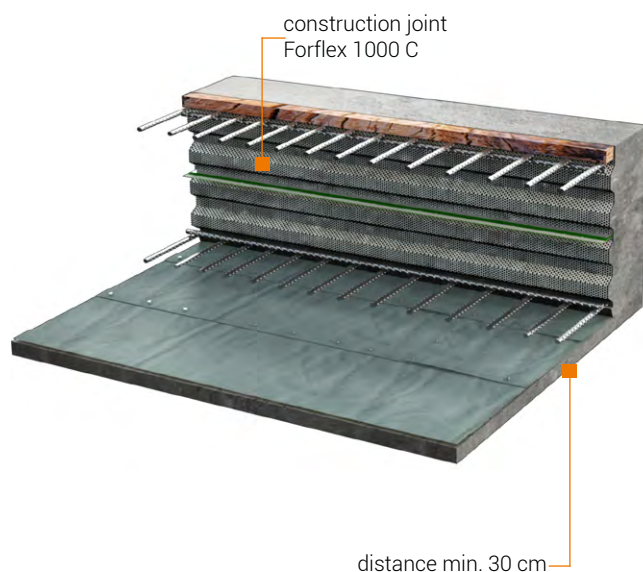

STEP 4

Concreting of construction joint.

