


General recommendations:

- During the installation observe the compulsory security standards - wear protective gloves and work clothes with long sleeves. .
- Product should be stored in rooms protected from moisture and precipitation.
- Product must be fitted with a the bentonite layer from the side of the structure.


STEP 1

Preparation for the insulation of concrete foundation wall.

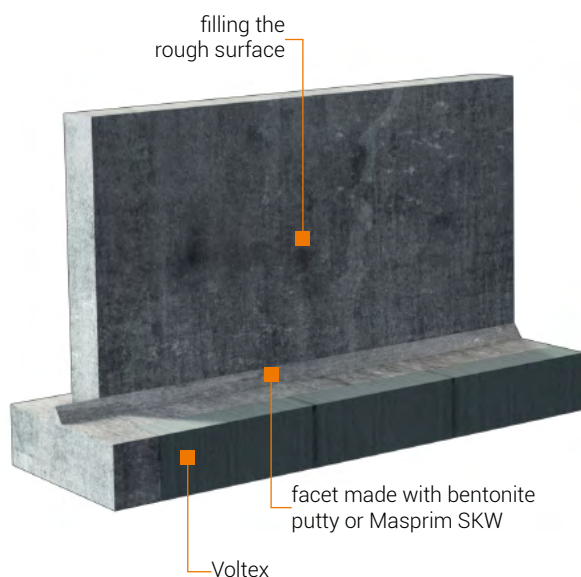


STEP 2

Placing of Swelltite with 5 cm of overlap.

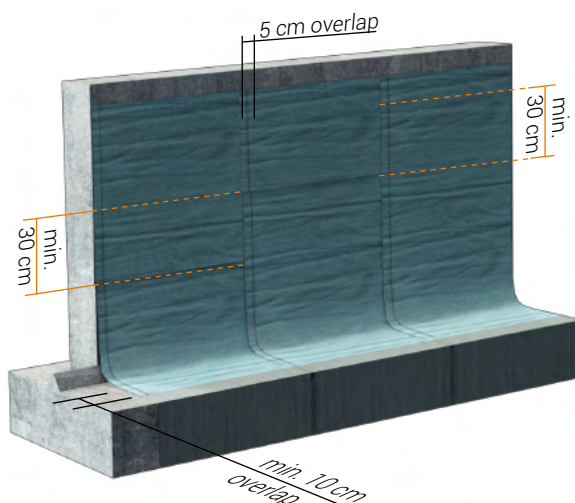

STEP 3

Installation of steel strip: LVT or LVS.

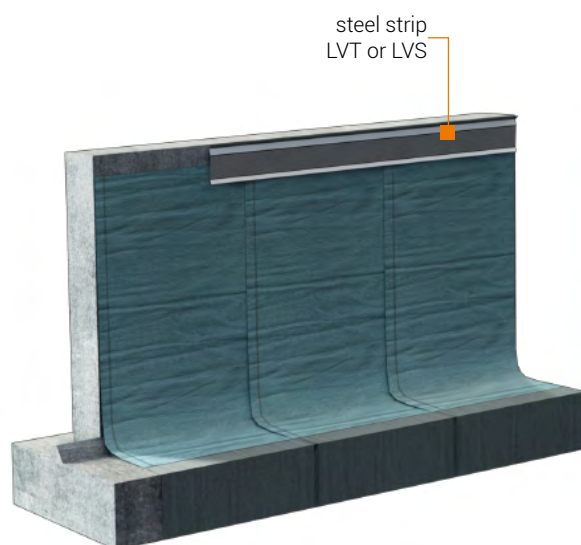

STEP 4

Setting styrofoam.

