


General recommendations:

- During the installation observe the compulsory security standards - wear protective gloves and work clothes with long sleeves.
- During transport and storage, protect against damage.


STEP 1

Installation of Topform to formwork.

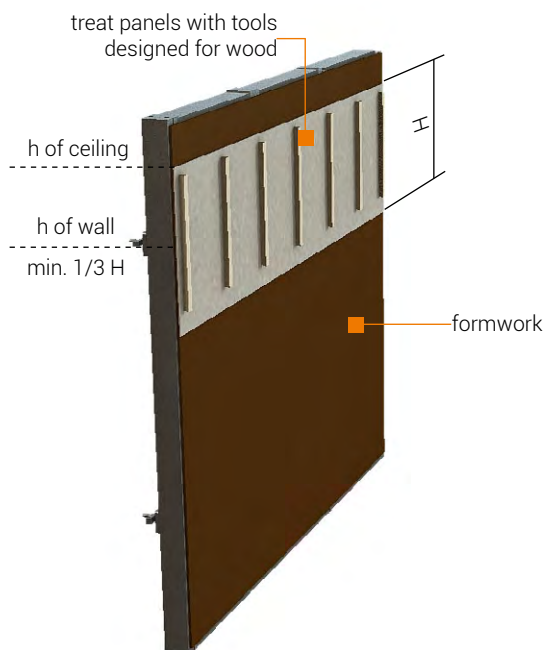

STEP 2

Concreting of walls.

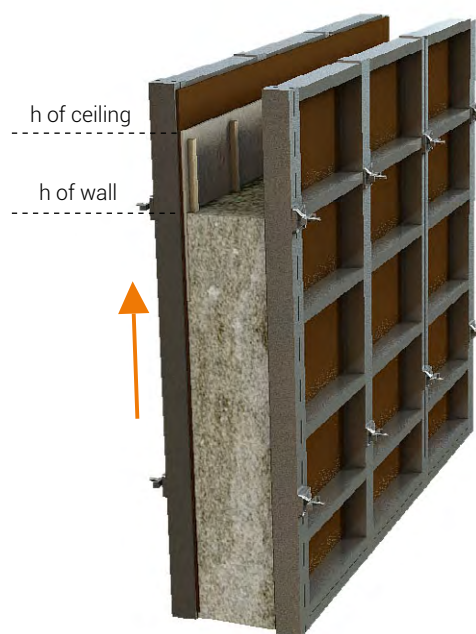

STEP 3

Removal of formworks from walls

PVC profiles enable strong connection with concrete



STEP 4

Shoring and concreting of ceiling.

